




Installing Fibo Shower & tub surround

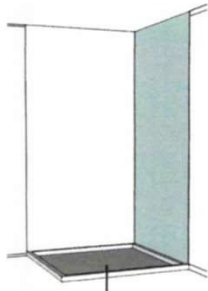


Shower corner with tray 36 x 36"

Pricing

Group
\$999.00
 Group
\$1,119.00

Note: \$30.00 sheet difference

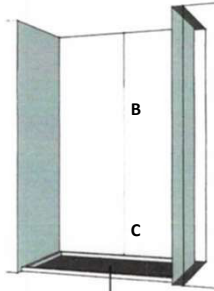


3 sided Alcove with shower tray 48 x 36"

Pricing

Group B
\$1,279.00
 Group C
\$1,429.00

Note: \$30.00 sheet difference

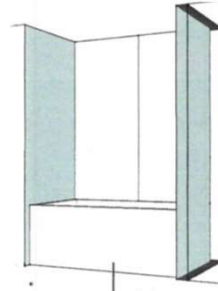

3 sided Alcove with bathtub 60 x 36"

Pricing


Group
\$1,419.00
 Group
\$1,599.00

Note: \$30.00 sheet difference

Material List	QTY
Wall panels (24 inch)	4
Internal corners	1
Base profile	1
L Shaped profile	2
Screws 40 count	1
Fibo seal	2
Fibo clean	1
Fibo wipes	1
Fibo seal tool	1

Material List	QTY
Wall panels (24 inch)	5
Internal corners	2
Base profile	2
L Shaped profile	2
Screws 200 count	1
Fibo seal	3
Fibo clean	1
Fibo wipes	1
Fibo seal tool	1

Material List	QTY
Wall panels (24 inch)	6
Internal corners	2
Base profile	2
L Shaped profile	2
Screws 200 count	1
Fibo seal	3
Fibo clean	1
Fibo wipes	1
Fibo seal tool	1

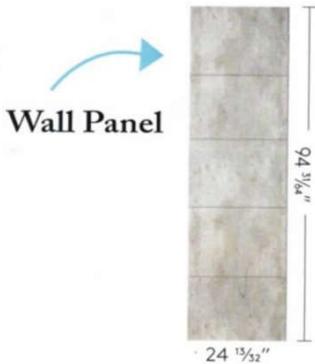

- ### Tools required for installation
- * Knife, retractable or similar
 - * Track saw, miter saw, plunge saw or circular saw
 - * Ruler & pencil
 - * Drill and bits kit
 - * Hole saw or jig saw
 - * Level or laser level
 - * Caulking Gun

*Shower base and bath tub are not included the price.